

Firmware Upgrade using SR11.1 and SR11.3

Step 1: Firmware Distribution

Step 2: Firmware Activation

